


# Fiat Ducato Daiichi Radio


42sfa019

Adapter-Kabelbaum liegt ummantelt zur Fahrerseite hin weggebunden. 52 Pin Fiat Stecker





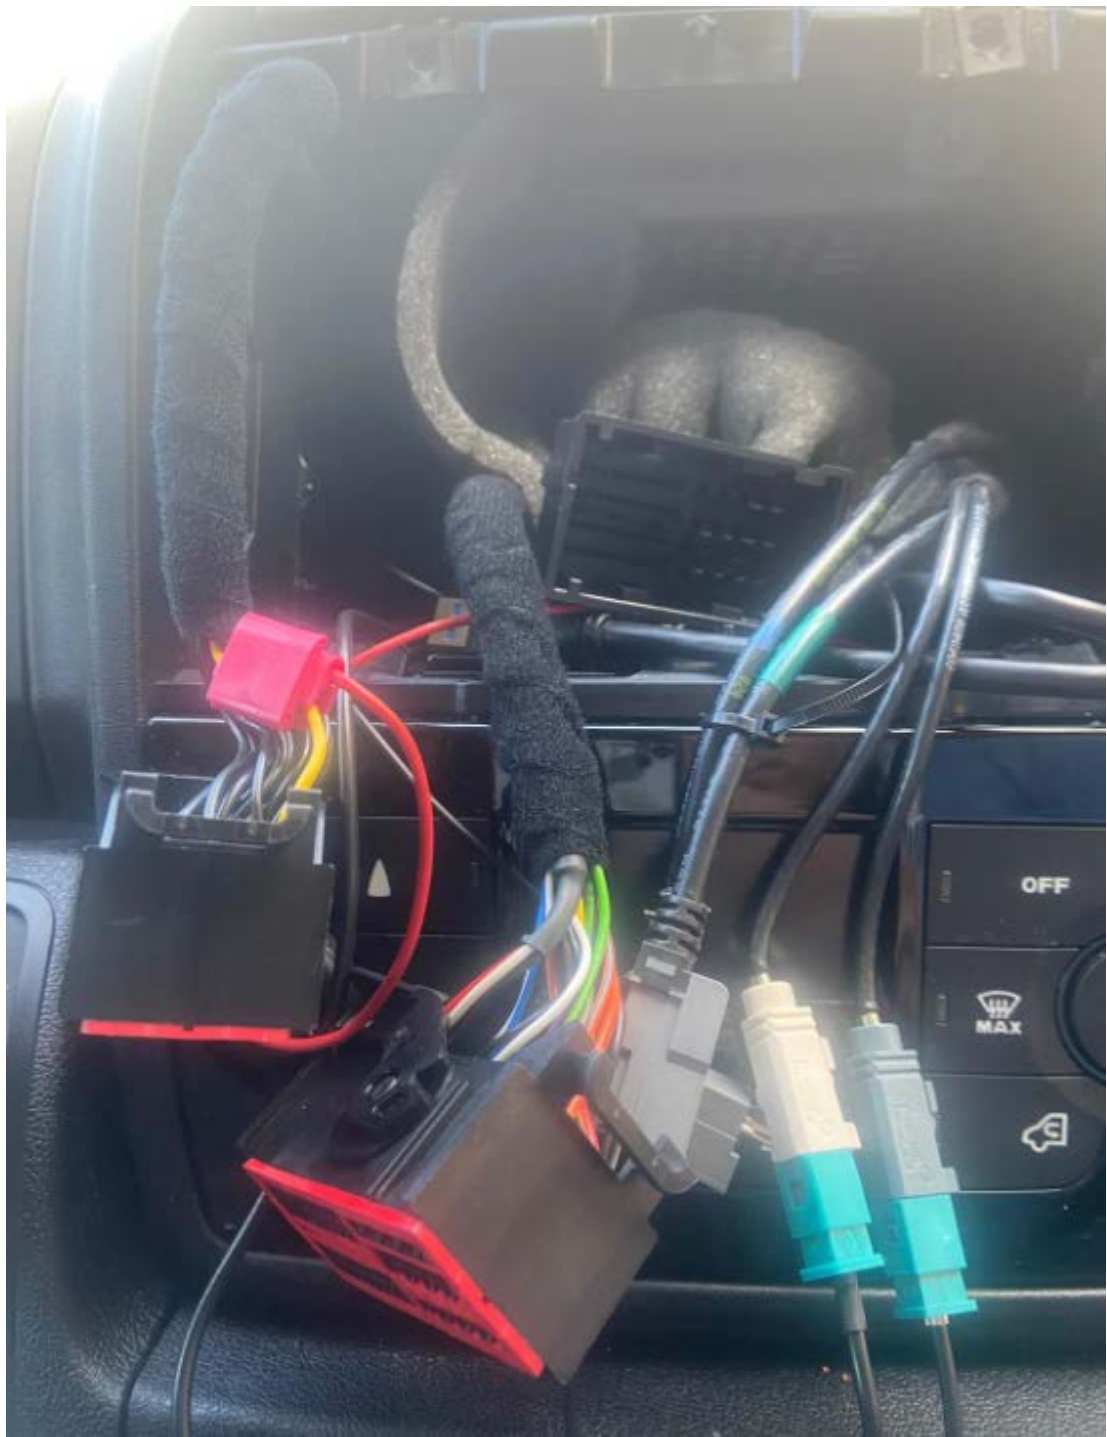

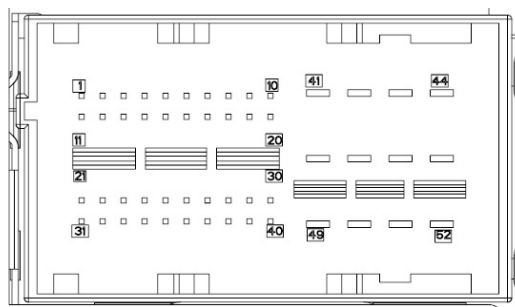

52 pin TYCO connector				
PIN N.	SIGNAL NAME	IN/OUT	LEVEL	REMARK
1	Not Used			
2	Not Used			
3	Handbreake	In	12V	Active Low
4	VSO Signal	In	+5V	1 Hz-1 KHz
5	Illumination Signal	In	12V	
6	Rear door satus	In		
7	Not Used			
8	SWRC Ground	In		
9	SWRC Left	In	+3.3 V	
10	SWRC Right	In	+3.3 V	
11	Not Used			
12	Not Used			
13	Not Used			
14	Not Used			
15	Not Used			
16	Not Used			
17	Not Used			
18	Not Used			
19	Reverse Signal	In	12V	Active high
20	Not Used			
21	Not Used			
22	Not Used			
23	Not Used			
24	PIC UART TX	Out	+3.3 V	Auto test
25	PIC UART RX	In	+3.3 V	Auto test
26	Not Used			
27	Not Used			
28	TEL/EVA MUTE	In		Ground for activation
29	Microphone 1 -	In	+8V	MIC ready
30	Microphone 1 +	In	+8V	MIC ready
31	Rear view Camera Signal +	In		CVBS+
32	Rear view Camera Signal -	In		CVBS-
33	Rear view Camera Signal Shield	In		
34	Not Used			
35	Not Used			
36	Not Used			
37	Not Used			
38	Not Used			
39	Not Used			
40	Not Used			
41	Not Used			
42	ACC (+15)	In	+12V	
43	Main GND			
44	Battery (+30)	In	+10V/+16V	
45	Rear Right +	Out		
46	Front Right +	Out		
47	Front Left +	Out		
48	Rear Left +	Out		
49	Rear Right -	Out		
50	Front Left -	Out		
51	Front Left -	Out		
52	Rear Left -	Out		